

---

Subject: Help - I think I pooched my EDS card  
Posted by [Ted Gerber](#) on Wed, 26 Sep 2007 03:40:21 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi Folks-

I need some hardware advice. I think I've wrecked my EDS input connector. We're recording and editing in different locations, and I've been lugging my Paris rig all over the place. Tonight, while in a hurry to set up for tracking, I forced the EDS/Mec connector cable into the EDS card at a bad angle, and broke a couple of pins. No problem, I have a spare and used it. No luck. When Paris boots, it now cannot find the Mec.

A closer look at the female input connector on the EDS card, shows some damage too.

My question is, can this component be replaced as a separate item by any computer repair type, or is it not removable, and therefore I'll need to send the card away?

Any help appreciated, we're wanting to keep moving on this.

Peace,

Ted

---