
Subject: CS16 repair

Posted by [danielcornelius](#) on Mon, 31 Mar 2014 15:56:10 GMT

[View Forum Message](#) <> [Reply to Message](#)

Hi there !

I like to repair a damaged CS16. The Power LED of CS16 isn't blinking, so I wonder myself, if it gets no power. Someone knows wich pins of the Cat5 Cable brings the power CS16 ? And in wich way can I meter that by Voltagemeter ?

The Paris Software 3.0 start without problems, the MEC works fine too. The ParisHardware is the blue one. In Menu Settings is the checkbox active for Paris Pro CS16.

Did someone Ideas to Help me.

THX....Dan

Subject: Re: CS16 repair

Posted by [danielcornelius](#) on Mon, 31 Mar 2014 17:53:20 GMT

[View Forum Message](#) <> [Reply to Message](#)

Ok. First mistake, the EDS have a damage socket, so i change the EDS and the CS16 don't work. I have change the CD16 with another one=> CS16 works. So i believe something is damaged inside the CS16.

I have soldered some switches into the damaged CS16. is it possible to sold it in a wrong way onto board ?

Subject: Re: CS16 repair

Posted by [danielcornelius](#) on Sun, 06 Apr 2014 12:02:30 GMT

[View Forum Message](#) <> [Reply to Message](#)

Does anyone have an curcuit plan for the CS16 ?
Need Help please !

Subject: Re: CS16 repair

Posted by [danielcornelius](#) on Sun, 06 Jul 2014 15:46:40 GMT

[View Forum Message](#) <> [Reply to Message](#)

Ok.
I turned inside CS16 the ribbon, it works fine.
