
Subject: monitor level "volume" not working
Posted by [michael bliss](#) on Thu, 19 Oct 2006 23:17:22 GMT
[View Forum Message](#) <> [Reply to Message](#)

Don't know what is going on here. Just recently the Monitor Level volume doesn't adjust. I cannot solo any channels. Also, the "Dim Mute" button and the "mono" button are not responding. I hooked up another cable to the Mec, and also reinstalled Paris, but no luck.

I was talking to DeeJ about this and he suggested it could be the C-16 possibly going south but not sure. Was hoping maybe somebody else has had similar problems?
I can't turn the monitor level up or down, the volume doesn't change. Weird!

michael

Subject: Re: monitor level "volume" not working
Posted by [michael bliss](#) on Fri, 20 Oct 2006 00:28:14 GMT
[View Forum Message](#) <> [Reply to Message](#)

well the good news is, it's only happening on one song. Maybe there's too many things going on and i'm taxing my system, except that I don't think there's that many plugs being used. There's 23 tracks, 5 compressors on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

michael

"michael bliss" <mbliss1@austin.rr.com> wrote:

>
>Don't know what is going on here. Just recently the Monitor
>Level volume doesn't adjust. I cannot solo any channels.
>Also, the "Dim Mute" button and the "mono" button are not responding.
>I hooked up another cable to the Mec, and also reinstalled Paris, but no
>luck.
>
>I was talking to DeeJ about this and he suggested it could be the
>C-16 possibly going south but not sure. Was hoping maybe somebody else has
>had similar problems?
>I can't turn the monitor level up or down, the volume doesn't change. Weird!
>
>michael

Subject: Re: monitor level "volume" not working
Posted by [audioguy_editout_](#) on Fri, 20 Oct 2006 01:44:11 GMT

I'll bet anything you patch bay assignment for the main outs is different for this song. The mL and mR patch points follow the monitor pot position.

David.

michael bliss wrote:

> well the good news is, it's only happening on one song.
> Maybe there's too many things going on and i'm taxing my system, except that
> I don't think there's that many plugs being used. There's 23 tracks, 5 compressors
> on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

>

> michael

>

> "michael bliss" <mbliss1@austin.rr.com> wrote:

>

>>Don't know what is going on here. Just recently the Monitor

>>Level volume doesn't adjust. I cannot solo any channels.

>>Also, the "Dim Mute" button and the "mono" button are not responding.

>>I hooked up another cable to the Mec, and also reinstalled Paris, but no

>>luck.

>>

>>I was talking to DeeJ about this and he suggested it could be the

>>C-16 possibly going south but not sure. Was hoping maybe somebody else has

>>had similar problems?

>>I can't turn the monitor level up or down, the volume doesn't change. Weird!

>>

>>michael

>

>

Subject: Re: monitor level "volume" not working

Posted by [michael bliss](#) on Fri, 20 Oct 2006 02:02:16 GMT

[View Forum Message](#) <> [Reply to Message](#)

well, all better. It wasn't the patchbay, I think I had a corrupt file. I made a copy as, and everything started working. Very strange. Thanks for the input Dave, I was pulling my hair out trying everything to figure this out.

michael

"Dave(EK Sound)" <audioguy_editout_@shaw.ca> wrote:

>I'll bet anything you patch bay assignment for the main outs

>is different for this song. The mL and mR patch points

>follow the monitor pot position.

>

>David.

>

>michael bliss wrote:

>> well the good news is, it's only happening on one song.

>> Maybe there's too many things going on and i'm taxing my system, except that

>> I don't think there's that many plugs being used. There's 23 tracks, 5 compressors

>> on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

>>

>> michael

>>

>> "michael bliss" <mbliss1@austin.rr.com> wrote:

>>

>>>Don't know what is going on here. Just recently the Monitor

>>>Level volume doesn't adjust. I cannot solo any channels.

>>>Also, the "Dim Mute" button and the "mono" button are not responding.

>>>I hooked up another cable to the Mec, and also reinstalled Paris, but no

>>>luck.

>>>

>>>I was talking to DeeJ about this and he suggested it could be the

>>>C-16 possibly going south but not sure. Was hoping maybe somebody else has

>>>had similar problems?

>>>I can't turn the monitor level up or down, the volume doesn't change.

Weird!

>>>

>>>michael

>>

>>