

---

Subject: monitor level "volume" not working  
Posted by [michael bliss](#) on Thu, 19 Oct 2006 23:17:22 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Don't know what is going on here. Just recently the Monitor Level volume doesn't adjust. I cannot solo any channels. Also, the "Dim Mute" button and the "mono" button are not responding. I hooked up another cable to the Mec, and also reinstalled Paris, but no luck.

I was talking to DeeJ about this and he suggested it could be the C-16 possibly going south but not sure. Was hoping maybe somebody else has had similar problems?  
I can't turn the monitor level up or down, the volume doesn't change. Weird!

michael

---

---

Subject: Re: monitor level "volume" not working  
Posted by [michael bliss](#) on Fri, 20 Oct 2006 00:28:14 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

well the good news is, it's only happening on one song. Maybe there's too many things going on and i'm taxing my system, except that I don't think there's that many plugs being used. There's 23 tracks, 5 compressors on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

michael

"michael bliss" <mbliss1@austin.rr.com> wrote:

>  
>Don't know what is going on here. Just recently the Monitor  
>Level volume doesn't adjust. I cannot solo any channels.  
>Also, the "Dim Mute" button and the "mono" button are not responding.  
>I hooked up another cable to the Mec, and also reinstalled Paris, but no  
>luck.  
>  
>I was talking to DeeJ about this and he suggested it could be the  
>C-16 possibly going south but not sure. Was hoping maybe somebody else has  
>had similar problems?  
>I can't turn the monitor level up or down, the volume doesn't change. Weird!  
>  
>michael

---

---

Subject: Re: monitor level "volume" not working  
Posted by [audioguy\\_editout\\_](#) on Fri, 20 Oct 2006 01:44:11 GMT

---

I'll bet anything you patch bay assignment for the main outs is different for this song. The mL and mR patch points follow the monitor pot position.

David.

michael bliss wrote:

> well the good news is, it's only happening on one song.  
> Maybe there's too many things going on and i'm taxing my system, except that  
> I don't think there's that many plugs being used. There's 23 tracks, 5 compressors  
> on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

>

> michael

>

> "michael bliss" <mbliss1@austin.rr.com> wrote:

>

>>Don't know what is going on here. Just recently the Monitor

>>Level volume doesn't adjust. I cannot solo any channels.

>>Also, the "Dim Mute" button and the "mono" button are not responding.

>>I hooked up another cable to the Mec, and also reinstalled Paris, but no

>>luck.

>>

>>I was talking to DeeJ about this and he suggested it could be the

>>C-16 possibly going south but not sure. Was hoping maybe somebody else has

>>had similar problems?

>>I can't turn the monitor level up or down, the volume doesn't change. Weird!

>>

>>michael

>

>

---

Subject: Re: monitor level "volume" not working

Posted by [michael bliss](#) on Fri, 20 Oct 2006 02:02:16 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

well, all better. It wasn't the patchbay, I think I had a corrupt file. I made a copy as, and everything started working. Very strange. Thanks for the input Dave, I was pulling my hair out trying everything to figure this out.

michael

"Dave(EK Sound)" <audioguy\_editout\_@shaw.ca> wrote:

>I'll bet anything you patch bay assignment for the main outs

>is different for this song. The mL and mR patch points

>follow the monitor pot position.

>

>David.

>

>michael bliss wrote:

>> well the good news is, it's only happening on one song.

>> Maybe there's too many things going on and i'm taxing my system, except that

>> I don't think there's that many plugs being used. There's 23 tracks, 5 compressors

>> on, some reverbs, no VST's. hmmm... maybe the track got corrupted?

>>

>> michael

>>

>> "michael bliss" <mbliss1@austin.rr.com> wrote:

>>

>>>Don't know what is going on here. Just recently the Monitor

>>>Level volume doesn't adjust. I cannot solo any channels.

>>>Also, the "Dim Mute" button and the "mono" button are not responding.

>>>I hooked up another cable to the Mec, and also reinstalled Paris, but no

>>>luck.

>>>

>>>I was talking to DeeJ about this and he suggested it could be the

>>>C-16 possibly going south but not sure. Was hoping maybe somebody else has

>>>had similar problems?

>>>I can't turn the monitor level up or down, the volume doesn't change.

Weird!

>>>

>>>michael

>>

>>