
Subject: Help w/Error initializing Paris Enging. Error code 1/1

Posted by [hoochcooch](#) on Sun, 26 Apr 2009 02:21:47 GMT

[View Forum Message](#) <> [Reply to Message](#)

Error initializing Paris Enging. Error code 1/1

Does anyone know what that means?

I am in the process of moving paris over to a "newer" Dell 340 workstation pc. It has

- * 2.2gHZ P4 Intel single core processor
- * 1 GB memory
- * 1 EDS card
- * nVidia dual head vga card
- * no other cards in the system / network etc built into mobo
- * baseline XP pro and no other software installed (ie word, etc)
- * Scherzo driver installs OK
- * Tried it on Paris 2.2 & 3.0

I have had this running successfully on a PIII for years and will move back to it if I must but I really want to move this to a faster pc.

I ran the uart support program which supposedly writes to DebugView but it dies before anything gets written out.

Would the new multi-core drivers help?

Any thoughts are greatly appreciated.

hc