

---

Subject: monitor level "volume" not working

Posted by [michael bliss](#) on Thu, 19 Oct 2006 23:17:22 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Don't know what is going on here. Just recently the Monitor

Level volume doesn't adjust. I cannot solo any channels.

Also, the "Dim Mute" button and the "mono" button are not responding.

I hooked up another cable to the Mec, and also reinstalled Paris, but no luck.

I was talking to DeeJ about this and he suggested it could be the

C-16 possibly going south but not sure. Was hoping maybe somebody else has had similar problems?

I can't turn the monitor level up or down, the volume doesn't change. Weird!

michael

---