

---

Subject: Can't see a partition in Win98SE

Posted by [Rich Kelley](#) on Tue, 13 Jun 2006 15:32:56 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Howdy,

I have a new Seagate 400 GB HD I'm trying to set up on Win98SE with FAT 32. I'm trying to make 3 133 GB partitions on the drive (to stay below the 137GB limit for any one partition). System is an old MSI K7 Pro (MS-6195) w/ a 900 MHz Athlon slot A. I'm able to make the three partitions using Seagate's partitioning program that came with the drive when I have the drive on my primary master.

However, when the drive is on the secondary IDE cable the third partition is messed up. In the disk partitioning program it says that the partition is a FAT 16 partition (it's not), and in Win98SE I can't see the third partition at all. I checked the drive on another Win98SE system (also old, Iwill XP333 with a Athlon 1800+) and couldn't see the third partition there either.

Any ideas what's up? I should be able to see all three partitions in Win98SE, correct? Is it the fact that the boards are so old? Could it be a problem with the drive?

Thanks for any help.

Rich Kelley

---