

---

Subject: Re: Help needed re WordClock

Posted by [EK Sound](#) on Tue, 20 Mar 2007 14:53:54 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

"both MEC's"... you realize you only need the house sync line if you have three or more MEC's right??? Do yourself a favour, remove the line in the config file, feed external clock the the first MEC, loop to the second and be done. Simply set the project to word clock sync... we've been doing it that way for years with "0" trouble.

David.

hank wrote:

> Ive done the config file bit( UseHousesync=1) opened up Paris from within  
> the folder so I can change it to wordclock and then save as a default file.  
> i get a lashing red sync  
> in the project window and all my cards on the MEC keep flashing red.  
> Sometimes I cant load Paris as I get the message :engine cant etc check leads."  
> I then take the string out of the config file and it loads up. I try to change  
> to word clock and I get flashing red sync plus cards flash. Ive tried it  
> with Big Beb in off, on without and i cant change to word clock ,both MEC's  
> flash. ive reinstalled paris twice. Has anyone had the wordclock input ever  
> fail on a MEC  
> Hope someone can help  
> Hank

---

---

Subject: Help needed re WordClock

Posted by [hank](#) on Tue, 20 Mar 2007 15:41:07 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Ive done the config file bit( UseHousesync=1) opened up Paris from within the folder so I can change it to wordclock and then save as a default file.  
i get a lashing red sync  
in the project window and all my cards on the MEC keep flashing red.  
Sometimes I cant load Paris as I get the message :engine cant etc check leads."  
I then take the string out of the config file and it loads up. I try to change to word clock and I get flashing red sync plus cards flash. Ive tried it with Big Beb in off, on without and i cant change to word clock ,both MEC's flash. ive reinstalled paris twice. Has anyone had the wordclock input ever fail on a MEC  
Hope someone can help  
Hank

---

---

Subject: Re: Help needed re WordClock

Posted by [Deej \[4\]](#) on Tue, 20 Mar 2007 15:54:30 GMT

If you are using an external WC and your default project is not set to 48KHz, then you will never achieve reliable sync. You have to do this.....or you will die.

"hank" <hkovac@bigpond.net.au> wrote in message news:45fff283\$1@linux...

>  
> Ive done the config file bit( UseHousesync=1) opened up Paris from within  
> the folder so I can change it to wordclock and then save as a default  
> file.  
> i get a lashing red sync  
> in the project window and all my cards on the MEC keep flashing red.  
> Sometimes I cant load Paris as I get the message :engine cant etc check  
> leads."  
> I then take the string out of the config file and it loads up. I try to  
> change  
> to word clock and I get flashing red sync plus cards flash. Ive tried it  
> with Big Beb in off, on without and i cant change to word clock ,both  
> MEC's  
> flash. ive reinstalled paris twice. Has anyone had the wordclock input  
> ever  
> fail on a MEC  
> Hope someone can help  
> Hank

---

---

Subject: Re: Help needed re WordClock  
Posted by [Dimitrios](#) on Wed, 21 Mar 2007 15:16:20 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hey DJ,  
How are you ?  
I have read saying that many times !  
Hiw come I use external wordclock for over a year now with Usehousesync three  
mecs and my default project is always at 44.1 with 0 problems ?  
Maybe if I use the 48khz I amy be getting even better ? :)  
Regards,  
Dimitrios

"DJ" <www.aarrrrggghhh!!!.com> wrote:  
>If you are using an external WC and your default project is not set to  
>48KHz, then you will never achieve reliable sync. You have to do  
>this.....or you will die.  
>

>"hank" <hkovac@bigpond.net.au> wrote in message news:45fff283\$1@linux...  
>>  
>> Ive done the config file bit( UseHousesync=1) opened up Paris from within  
>> the folder so I can change it to wordclock and then save as a default  
  
>> file.  
>> i get a lashing red sync  
>> in the project window and all my cards on the MEC keep flashing red.  
>> Sometimes I cant load Paris as I get the message :engine cant etc check  
  
>> leads."  
>> I then take the string out of the config file and it loads up. I try to  
  
>> change  
>> to word clock and I get flashing red sync plus cards flash. Ive tried  
it  
>> with Big Beb in off, on without and i cant change to word clock ,both  
  
>> MEC's  
>> flash. ive reinstalled paris twice. Has anyone had the wordclock input  
  
>> ever  
>> fail on a MEC  
>> Hope someone can help  
>> Hank  
>  
>

---

---

Subject: Re: Help needed re WordClock  
Posted by [Deej \[4\]](#) on Wed, 21 Mar 2007 17:37:06 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

How many MECs are you using?

Doing fine BTW?

;o)

"Dimitrios" <musurgio@otenet.gr> wrote in message news:46013e34\$1@linux...  
>  
> Hey DJ,  
> How are you ?  
> I have read saying that many times !  
> Hiw come I use external wordclock for over a year now with Usehousesync  
> three  
> mecs and my default project is always at 44.1 with 0 problems ?  
> Maybe if I use the 48khz I amy be getting even better ? :)

> Regards,  
> Dimitrios  
>  
>  
>  
>  
> "DJ" <www.aarrrrggghhh!!!.com> wrote:  
>>If you are using an external WC and your default project is not set to  
>>48KHz, then you will never achieve reliable sync. You have to do  
>>this.....or you will die.  
>>  
>>"hank" <hkovac@bigpond.net.au> wrote in message news:45fff283\$1@linux...  
>>>  
>>> Ive done the config file bit( UseHousesync=1) opened up Paris from  
>>> within  
>>> the folder so I can change it to wordclock and then save as a default  
>  
>>> file.  
>>> i get a lashing red sync  
>>> in the project window and all my cards on the MEC keep flashing red.  
>>> Sometimes I cant load Paris as I get the message :engine cant etc check  
>  
>>> leads."  
>>> I then take the string out of the config file and it loads up. I try to  
>  
>>> change  
>>> to word clock and I get flashing red sync plus cards flash. Ive tried  
> it  
>>> with Big Beb in off, on without and i cant change to word clock ,both  
>  
>>> MEC's  
>>> flash. ive reinstalled paris twice. Has anyone had the wordclock input  
>  
>>> ever  
>>> fail on a MEC  
>>> Hope someone can help  
>>> Hank  
>>  
>>  
>

---

Subject: Re: Help needed re WordClock  
Posted by [Dimitrios](#) on Wed, 21 Mar 2007 19:11:23 GMT  
[View Forum Message](#) <> [Reply to Message](#)

Fine thanks !  
I have three mecs.

Four adat modules and two in modules.

Regards,  
Dimitrios

"DJ" <www.aarrrrggghh!!!.com> wrote:

>How many MECs are you using?

>

>Doing fine BTW?

>

>;o)

>

>"Dimitrios" <musurgio@otenet.gr> wrote in message news:46013e34\$1@linux...

>>

>> Hey DJ,

>> How are you ?

>> I have read saying that many times !

>> Hiw come I use external wordclock for over a year now with Usehousesync

>> three

>> mecs and my default project is always at 44.1 with 0 problems ?

>> Maybe if I use the 48khz I amy be getting even better ? :)

>> Regards,

>> Dimitrios

>>

>>

>>

>>

>> "DJ" <www.aarrrrggghh!!!.com> wrote:

>>>If you are using an external WC and your default project is not set to

>>>48KHz, then you will never achieve reliable sync. You have to do

>>>this.....or you will die.

>>>

>>>"hank" <hkovac@bigpond.net.au> wrote in message news:45fff283\$1@linux...

>>>>

>>>> Ive done the config file bit( UseHousesync=1) opened up Paris from

>>>> within

>>>> the folder so I can change it to wordclock and then save as a default

>>

>>>> file.

>>>> i get a lashing red sync

>>>> in the project window and all my cards on the MEC keep flashing red.

>>>> Sometimes I cant load Paris as I get the message :engine cant etc check

>>

>>>> leads."

>>>> I then take the string out of the config file and it loads up. I try

to

>>

>>>> change

>>>> to word clock and I get flashing red sync plus cards flash. Ive tried  
>> it  
>>>> with Big Beb in off, on without and i cant change to word clock ,both  
>>  
>>>> MEC's  
>>>> flash. ive reinstalled paris twice. Has anyone had the wordclock input  
>>  
>>>> ever  
>>>> fail on a MEC  
>>>> Hope someone can help  
>>>> Hank  
>>>  
>>>  
>>  
>  
>

---

---

Subject: Re: Help needed re WordClock  
Posted by [Deej \[4\]](#) on Wed, 21 Mar 2007 20:15:44 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hmmm.....I dunno. I could never achieve reliable sync unless I went with the 48k setting in the project.

"Dimitrios" <musurgio@Nospam.otenet.gr> wrote in message  
news:4601754b\$1@linux...

>  
> Fine thanks !  
> I have three mecs.  
> Four adat modules and two in modules.  
> Regards,  
> Dimitrios  
>  
> "DJ" <www.aarrrrggghhh!!!.com> wrote:  
>>How many MECs are you using?  
>>  
>>Doing fine BTW?  
>>  
>>;o)  
>>  
>>"Dimitrios" <musurgio@otenet.gr> wrote in message news:46013e34\$1@linux...  
>>>  
>>> Hey DJ,  
>>> How are you ?  
>>> I have read saying that many times !  
>>> Hiw come I use external wordclock for over a year now with Usehousesync  
>

>>> three  
>>> mecs and my default project is always at 44.1 with 0 problems ?  
>>> Maybe if I use the 48khz I amy be getting even better ? :)  
>>> Regards,  
>>> Dimitrios  
>>>  
>>>  
>>>  
>>>  
>>> "DJ" <www.aarrrrggghhh!!!.com> wrote:  
>>>>If you are using an external WC and your default project is not set to  
>>>>48KHz, then you will never achieve reliable sync. You have to do  
>>>>this.....or you will die.  
>>>>  
>>>>"hank" <hkovac@bigpond.net.au> wrote in message news:45fff283\$1@linux...  
>>>>>  
>>>>> Ive done the config file bit( UseHousesync=1) opened up Paris from  
>>>>> within  
>>>>> the folder so I can change it to wordclock and then save as a default  
>>>>  
>>>>> file.  
>>>>> i get a lashing red sync  
>>>>> in the project window and all my cards on the MEC keep flashing red.  
>>>>> Sometimes I cant load Paris as I get the message :engine cant etc  
>>>>> check  
>>>>  
>>>>> leads."  
>>>>> I then take the string out of the config file and it loads up. I try  
> to  
>>>  
>>>>> change  
>>>>> to word clock and I get flashing red sync plus cards flash. Ive tried  
>>>> it  
>>>>> with Big Beb in off, on without and i cant change to word clock ,both  
>>>>  
>>>>> MEC's  
>>>>> flash. ive reinstalled paris twice. Has anyone had the wordclock input  
>>>>  
>>>>> ever  
>>>>> fail on a MEC  
>>>>> Hope someone can help  
>>>>> Hank  
>>>>  
>>>>  
>>>>  
>>  
>>  
>

---