

---

Subject: How to patch to ADAT card?

Posted by [David L](#) on Thu, 24 Jun 2021 23:45:56 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I am firing up my old PARIS system again because I need 8 analog inputs going to 8 ADAT outputs. Problem is that my ADAT card does not show up in the PARIS Patchbay. My manual doesn't have anything in it that I can reference. Can anyone here help?

Thanks,

David

---

---

Subject: Re: How to patch to ADAT card?

Posted by [Kim W.](#) on Fri, 25 Jun 2021 09:02:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi.

It should show up in the inventory window to the right of the virtual patchbay.

You should be able to drag it into the patchbay view from the list of modules, and then make connections.

Hope it works.

Kim

---

---

Subject: Re: How to patch to ADAT card?

Posted by [Kim W.](#) on Fri, 25 Jun 2021 11:29:17 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sorry, Forgot to mention.

If your ADAT card is installed in mec 1, you have to double click "MEC A" in the inventory. This will open a window with the installed hardware. That's where the ADAT module will show. From there you should be able to drag the module into the patch bay view. (I have two MECS with two 16 I/O modules installed in each. I have my ADAT card installed in MEC 2. So you have to make a choice as to whether you want analog I/O, or Adat.

I know it's a bit convoluted, but it is what it is. Keep in mind, each MEC can only ever have 16 active inputs/outputs active at one time.

If you have two mecs, you're laughing.

Cheers,

Kim.

---

---

Subject: Re: How to patch to ADAT card?

Posted by [David L](#) on Wed, 18 Aug 2021 17:30:12 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Awesome! Thanks for the info.

---