
Subject: Multicard hookup is driving me crazy - HELP
Posted by [pbraun](#) on Thu, 15 Oct 2009 03:52:24 GMT
[View Forum Message](#) <> [Reply to Message](#)

OK, I've installed both cards, Windows sees 'em, installed Mike's scherzo.

I've got the two 16-pin cables crossed over in a nice, neat "X". I've got one 10-pin clock cable connected straight across.

I've double-checked to make sure all of the headers are connected to pins.

Every time I start the damn app up it tells me my EDS cards are connected improperly and will cause playback problems.

I haven't done this for two years since I set up the G4 in the mobile rack. I'd open it up and see how I did that, but it's buried inside an SKB rack on a pair of Marathon rails, and that case is at the bottom of my front-room closet. Not an easy task.

What the aitch-ee-double-hockey-sticks am I doing wrong here?

Thank you.

ARRRRRGGGGGHHHHHHHHH.
