

---

Subject: Help Please. Two Parises  
Posted by [gregodav](#) on Fri, 11 Nov 2011 09:59:06 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I have 2 Parises. I put 2 PC cards into my PC and install drivers and Paris software. I have two Paris mixes (hardware with knob controls and faders). So we can say, that i have mix A (chanel 1-16) and mix B(chanel 17-32). When i increase volume of chanel one (mix A), in software is increased chanel one and seventeen. So i am controlling both Parises with mix A only. What i sould do, when i want to control first Paris with mix A and second Paris with mix B? Result should be to record and control 32 chanel. Need i some cable to connect PC cards inside my Computer?

With lot of thanks

---

---

Subject: Re: Help Please. Two Parises  
Posted by [dnafe](#) on Fri, 11 Nov 2011 12:58:11 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

That would be my first question...do you have the two EDS cards connected together with the proper cables?

If not that's where you start

---

---

Subject: Re: Help Please. Two Parises  
Posted by [gregodav](#) on Fri, 11 Nov 2011 13:45:23 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

That could be the reason. Do you know if it is possible to buy this type of cable somewhere ?

---

---

Subject: Re: Help Please. Two Parises  
Posted by [kerryg](#) on Fri, 11 Nov 2011 22:35:18 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

The hardware mix controllers you've called "mixes" are called "C16s".

If I recall, by default both C16s will be controlling the same submix ("Submix A"). Hold down the "submix" button on the second C16 and press "2" on its numerical keypad to assign it to Submix "B", that should solve the problem.

---