
Subject: Re: Multiple EDS Error
Posted by [EK Sound](#) on Tue, 07 Feb 2006 18:43:09 GMT
[View Forum Message](#) <> [Reply to Message](#)

Welcome,

Paris Version?
Platform?
OS?
Number and type of interfaces?
How many ribbon cables did you use to interconnect the cards?

David.

Michael wrote:

> Hi Everyone,
>
> This is my first time posting and I really could use some help. I just installed
> a 2nd EDS card and I am getting this message:
>
> "Your EDS cards are not setup correctly and play back may not be correct"
>
> I followed the directions(pictures) as found in a FAQ document I found on
> the Internet. I also oriented all the red strips on the cables toward the
> back of the computer as described in the manual. My MEC is plugged into the
> card closest to the video card and there are 2 slots vacant between the video
> card and first EDS.
>
> Anyone know how to fix this? Thanks for your help.
>
> Michael

Subject: Re: Multiple EDS Error
Posted by [EK Sound](#) on Tue, 07 Feb 2006 19:03:07 GMT
[View Forum Message](#) <> [Reply to Message](#)

With no interface connected to the second EDS card, you will not be able to access any of the patch bay modules for Submix B... this is normal.

It is extremely easy to get the ribbons attached being one pin off, remove and re-seat the ribbon connectors making sure that the pin alignment is correct. If the ribbons have not been used in a while, try pulling them on and off the cards a few times to burnish the connections. The integrity of the ribbon connections is vital for the smooth operation of Paris.

David.

Michael wrote:

> Sorry for leaving out so many details.

>

> Ver 2.1

> PC

> Win98se

> One MEC

> 3 ribbon cables 2 long (16 pin?) a one short (8 pin?)

>

> I show Mixer B in the patchbay but it is greyed out when I drag it into the

> patchbay area.

>

> Thanks for helping

>

> EK Sound <spamnot.info@eksoundNO.com> wrote:

>

>>Welcome,

>>

>>Paris Version?

>>Platform?

>>OS?

>>Number and type of interfaces?

>>How many ribbon cables did you use to interconnect the cards?

>>

>>David.

>>

>>Michael wrote:

>>

>>>Hi Everyone,

>>>

>>>This is my first time posting and I really could use some help. I just

>

> installed

>

>>>a 2nd EDS card and I am getting this message:

>>>

>>>"Your EDS cards are not setup correctly and play back may not be correct"

>>>

>>>I followed the directions(pictures) as found in a FAQ document I found

>

> on

>

>>>the Internet. I also oriented all the red strips on the cables toward

>

> the

>
>>>back of the computer as described in the manual. My MEC is plugged into
>
> the
>
>>>card closest to the video card and there are 2 slots vacant between the
>
> video
>
>>>card and first EDS.
>>>
>>>Anyone know how to fix this? Thanks for your help.
>>>
>>>Michael
>
>

Subject: Multiple EDS Error
Posted by [Michael\[3\]](#) on Tue, 07 Feb 2006 19:11:25 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hi Everyone,

This is my first time posting and I really could use some help. I just installed a 2nd EDS card and I am getting this message:

"Your EDS cards are not setup correctly and play back may not be correct"

I followed the directions(pictures) as found in a FAQ document I found on the Internet. I also oriented all the red strips on the cables toward the back of the computer as described in the manual. My MEC is plugged into the card closest to the video card and there are 2 slots vacant between the video card and first EDS.

Anyone know how to fix this? Thanks for your help.

Michael

Subject: Re: Multiple EDS Error
Posted by [EK Sound](#) on Tue, 07 Feb 2006 19:16:39 GMT
[View Forum Message](#) <> [Reply to Message](#)

Honestly it doesn't matter which way the stripe faces as long as they all face the same way. This refers to the side the stripe is on "at the connector".

David.

Michael wrote:

> Thanks, David.

>

> I may have misaligned them...seems easy enough to do given the size. The

> red strip facing to the mounting side of the card is correct? I will do it

> all again and report the results. I appreciate your help.

>

> Michael

>

>

>

>

>

> EK Sound <spamnot.info@eksoundNO.com> wrote:

>

>>With no interface connected to the second EDS card, you will not be

>>able to access any of the patch bay modules for Submix B... this is

>>normal.

>>

>>It is extremely easy to get the ribbons attached being one pin off,

>>remove and re-seat the ribbon connectors making sure that the pin

>>alignment is correct. If the ribbons have not been used in a while,

>>try pulling them on and off the cards a few times to burnish the

>>connections. The integrity of the ribbon connections is vital for the

>>smooth operation of Paris.

>>

>>David.

>>

>>Michael wrote:

>>

>>

>>>Sorry for leaving out so many details.

>>>

>>>Ver 2.1

>>>PC

>>>Win98se

>>>One MEC

>>>3 ribbon cables 2 long (16 pin?) a one short (8 pin?)

>>>

>>>I show Mixer B in the patchbay but it is greyed out when I drag it into

>

> the

>

>>>patchbay area.

>>>
>>>Thanks for helping
>>>
>>>EK Sound <spamnot.info@eksoundNO.com> wrote:
>>>
>>>
>>>>Welcome,
>>>>
>>>>Paris Version?
>>>>Platform?
>>>>OS?
>>>>Number and type of interfaces?
>>>>How many ribbon cables did you use to interconnect the cards?
>>>>
>>>>David.
>>>>
>>>>Michael wrote:
>>>>
>>>>
>>>>>Hi Everyone,
>>>>>
>>>>>This is my first time posting and I really could use some help. I just
>>>>
>>>installed
>>>
>>>
>>>>>a 2nd EDS card and I am getting this message:
>>>>>
>>>>>"Your EDS cards are not setup correctly and play back may not be correct"
>>>>>
>>>>>I followed the directions(pictures) as found in a FAQ document I found
>>>>
>>>>on
>>>>
>>>>
>>>>>the Internet. I also oriented all the red strips on the cables toward
>>>>
>>>>the
>>>>
>>>>
>>>>>back of the computer as described in the manual. My MEC is plugged into
>>>>
>>>>the
>>>>
>>>>
>>>>>card closest to the video card and there are 2 slots vacant between the
>>>>
>>>>video

>>>
>>>
>>>>>card and first EDS.
>>>>>
>>>>>Anyone know how to fix this? Thanks for your help.
>>>>>
>>>>>Michael
>>>
>>>
>

Subject: Re: Multiple EDS Error
Posted by [EK Sound](#) on Tue, 07 Feb 2006 19:29:11 GMT
[View Forum Message](#) <> [Reply to Message](#)

By the way... the 16 pin ribbons must be "crossed over" each other, you didn't mention if you had done this or not.

David.

Michael wrote:

> Thanks, David.
>
> I may have misaligned them...seems easy enough to do given the size. The
> red strip facing to the mounting side of the card is correct? I will do it
> all again and report the results. I appreciate your help.
>
> Michael
>

Subject: Re: Multiple EDS Error
Posted by [Pete Ruthenburg](#) on Tue, 07 Feb 2006 19:45:22 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hi Michael and welcome.I've got a 4 EDS 2 MEC rig that I've been having problems with.I get this not connected properly error every now and then right now,but I believe they're connected properly as this system worked previously.

Probabbly going to do a reinstall of the 3.0 software and see what happens.I'll let you know.

Are you on PC or Mac?WHat version of PARIS?Running XP if your on PC?

Pete

"Michael" <heartwoodfx@hotmail.com> wrote:

>
>Hi Everyone,
>
>This is my first time posting and I really could use some help. I just installed
>a 2nd EDS card and I am getting this message:
>
>"Your EDS cards are not setup correctly and play back may not be correct"
>
>I followed the directions(pictures) as found in a FAQ document I found on
>the Internet. I also oriented all the red strips on the cables toward the
>back of the computer as described in the manual. My MEC is plugged into the
>card closest to the video card and there are 2 slots vacant between the
>video
>card and first EDS.
>
>Anyone know how to fix this? Thanks for your help.
>
>Michael

Subject: Re: Multiple EDS Error

Posted by [Michael\[3\]](#) on Tue, 07 Feb 2006 19:57:25 GMT

[View Forum Message](#) <> [Reply to Message](#)

Sorry for leaving out so many details.

Ver 2.1

PC

Win98se

One MEC

3 ribbon cables 2 long (16 pin?) a one short (8 pin?)

I show Mixer B in the patchbay but it is greyed out when I drag it into the patchbay area.

Thanks for helping

EK Sound <spamnot.info@eksoundNO.com> wrote:

>Welcome,

>

>Paris Version?

>Platform?

>OS?

>Number and type of interfaces?
>How many ribbon cables did you use to interconnect the cards?
>
>David.
>
>Michael wrote:
>> Hi Everyone,
>>
>> This is my first time posting and I really could use some help. I just
installed
>> a 2nd EDS card and I am getting this message:
>>
>> "Your EDS cards are not setup correctly and play back may not be correct"
>>
>> I followed the directions(pictures) as found in a FAQ document I found
on
>> the Internet. I also oriented all the red strips on the cables toward
the
>> back of the computer as described in the manual. My MEC is plugged into
the
>> card closest to the video card and there are 2 slots vacant between the
video
>> card and first EDS.
>>
>> Anyone know how to fix this? Thanks for your help.
>>
>> Michael

Subject: Re: Multiple EDS Error
Posted by [Michael\[3\]](#) on Tue, 07 Feb 2006 20:00:26 GMT
[View Forum Message](#) <> [Reply to Message](#)

Thanks for the welcome, Pete. Sorry about the omissions. I listed everyting
in another reply. Thank you for helping.

Michael

"Pete Ruthenburg" <ruthenburg@sbcglobal.net> wrote:
>
>Hi Michael and welcome.I've got a 4 EDS 2 MEC rig that I've been
>having problems with.I get this not connected properly error
>every now and then right now,but I believe they're connected
>properly as this system worked previously.
>
>Probabbly going to do a reinstall of the 3.0 software and see
>what happens.I'll let you know.
>

>Are you on PC or Mac?WHAT version of PARIS?Running XP if your on
>PC?
>
>Pete
>
>"Michael" <heartwoodfx@hotmail.com> wrote:
>>
>>Hi Everyone,
>>
>>This is my first time posting and I really could use some help. I just
installed
>>a 2nd EDS card and I am getting this message:
>>
>>"Your EDS cards are not setup correctly and play back may not be correct"
>>
>>I followed the directions(pictures) as found in a FAQ document I found
on
>>the Internet. I also oriented all the red strips on the cables toward the
>>back of the computer as described in the manual. My MEC is plugged into
>the
>>card closest to the video card and there are 2 slots vacant between the
>video
>>card and first EDS.
>>
>>Anyone know how to fix this? Thanks for your help.
>>
>>Michael
>

Subject: Re: Multiple EDS Error
Posted by [Michael\[3\]](#) on Tue, 07 Feb 2006 20:17:33 GMT
[View Forum Message](#) <> [Reply to Message](#)

Thanks, David.

I may have misaligned them...seems easy enough to do given the size. The red strip facing to the mounting side of the card is correct? I will do it all again and report the results. I appreciate your help.

Michael

EK Sound <spamnot.info@eksoundNO.com> wrote:
>With no interface connected to the second EDS card, you will not be

>able to access any of the patch bay modules for Submix B... this is
>normal.

>

>It is extremely easy to get the ribbons attached being one pin off,
>remove and re-seat the ribbon connectors making sure that the pin
>alignment is correct. If the ribbons have not been used in a while,
>try pulling them on and off the cards a few times to burnish the
>connections. The integrity of the ribbon connections is vital for the
>smooth operation of Paris.

>

>David.

>

>Michael wrote:

>

>> Sorry for leaving out so many details.

>>

>> Ver 2.1

>> PC

>> Win98se

>> One MEC

>> 3 ribbon cables 2 long (16 pin?) a one short (8 pin?)

>>

>> I show Mixer B in the patchbay but it is greyed out when I drag it into
the

>> patchbay area.

>>

>> Thanks for helping

>>

>> EK Sound <spamnot.info@eksoundNO.com> wrote:

>>

>>>Welcome,

>>>

>>>Paris Version?

>>>Platform?

>>>OS?

>>>Number and type of interfaces?

>>>How many ribbon cables did you use to interconnect the cards?

>>>

>>>David.

>>>

>>>Michael wrote:

>>>

>>>>Hi Everyone,

>>>>

>>>>This is my first time posting and I really could use some help. I just

>>>>

>> installed

>>

>>>>a 2nd EDS card and I am getting this message:
>>>>
>>>>"Your EDS cards are not setup correctly and play back may not be correct"
>>>>
>>>>I followed the directions(pictures) as found in a FAQ document I found
>>
>> on
>>
>>>>the Internet. I also oriented all the red strips on the cables toward
>>
>> the
>>
>>>>back of the computer as described in the manual. My MEC is plugged into
>>
>> the
>>
>>>>card closest to the video card and there are 2 slots vacant between the
>>
>> video
>>
>>>>card and first EDS.
>>>>
>>>>Anyone know how to fix this? Thanks for your help.
>>>>
>>>>Michael
>>
>>

Subject: Re: Multiple EDS Error
Posted by [EK Sound](#) on Tue, 07 Feb 2006 20:41:22 GMT
[View Forum Message](#) <> [Reply to Message](#)

Been there, done that! ;-)

Glad I could help.

David.

Michael wrote:

> David,
>
> You called this one right! I had one ribbon cable one pin off...message gone.
> Thanks a lot! I never even considered that as an option. I may not have caught
> it for a while.
>
> Michael

>
> EK Sound <spamnot.info@eksoundNO.com> wrote:
>
>>With no interface connected to the second EDS card, you will not be
>>able to access any of the patch bay modules for Submix B... this is
>>normal.
>>
>>It is extremely easy to get the ribbons attached being one pin off,
>>remove and re-seat the ribbon connectors making sure that the pin
>>alignment is correct. If the ribbons have not been used in a while,
>>try pulling them on and off the cards a few times to burnish the
>>connections. The integrity of the ribbon connections is vital for the
>>smooth operation of Paris.
>>
>>David.
>>
>>Michael wrote:
>>

Subject: Re: Multiple EDS Error
Posted by [Michael\[3\]](#) on Tue, 07 Feb 2006 20:54:14 GMT
[View Forum Message](#) <> [Reply to Message](#)

David,

You called this one right! I had one ribbon cable one pin off...message gone.
Thanks a lot! I never even considered that as an option. I may not have caught
it for a while.

Michael

EK Sound <spamnot.info@eksoundNO.com> wrote:
>With no interface connected to the second EDS card, you will not be
>able to access any of the patch bay modules for Submix B... this is
>normal.
>
>It is extremely easy to get the ribbons attached being one pin off,
>remove and re-seat the ribbon connectors making sure that the pin
>alignment is correct. If the ribbons have not been used in a while,
>try pulling them on and off the cards a few times to burnish the
>connections. The integrity of the ribbon connections is vital for the
>smooth operation of Paris.
>
>David.
>
>Michael wrote:
>

>> Sorry for leaving out so many details.
>>
>> Ver 2.1
>> PC
>> Win98se
>> One MEC
>> 3 ribbon cables 2 long (16 pin?) a one short (8 pin?)
>>
>> I show Mixer B in the patchbay but it is greyed out when I drag it into
the
>> patchbay area.
>>
>> Thanks for helping
>>
>> EK Sound <spamnot.info@eksoundNO.com> wrote:
>>
>>>Welcome,
>>>
>>>Paris Version?
>>>Platform?
>>>OS?
>>>Number and type of interfaces?
>>>How many ribbon cables did you use to interconnect the cards?
>>>
>>>David.
>>>
>>>Michael wrote:
>>>
>>>>Hi Everyone,
>>>>
>>>>This is my first time posting and I really could use some help. I just
>>
>> installed
>>
>>>>a 2nd EDS card and I am getting this message:
>>>>
>>>>"Your EDS cards are not setup correctly and play back may not be correct"
>>>>
>>>>I followed the directions(pictures) as found in a FAQ document I found
>>
>> on
>>
>>>>the Internet. I also oriented all the red strips on the cables toward
>>
>> the
>>
>>>>back of the computer as described in the manual. My MEC is plugged into
>>

>> the
>>
>>>>card closest to the video card and there are 2 slots vacant between the
>>
>> video
>>
>>>>card and first EDS.
>>>>
>>>>Anyone know how to fix this? Thanks for your help.
>>>>
>>>>Michael
>>
>>
