
Subject: adat card ins and outs don't work at the same time
Posted by [matthew Goodwin](#) on Fri, 20 Oct 2006 02:58:40 GMT
[View Forum Message](#) <> [Reply to Message](#)

so i have always only used the ins on my adat card, now when i try to use the outs, things get crazy.

on startup, the ins work fine, but the outs will only automatically loop what is coming in (i.e out 1 is getting signal from in 1, out 2 is getting in 2, and so on) even if i have my fx mixer (used for headphone mixes) patched to the adat module outs, nothing comes out except what is going in to each channel. and when i open the adat module by double clicking mec modules in the patch bay, then double clicking the adat module on the "outs" side, immediately my ins quit working and my outs work fine. i have to restart paris to get my adat ins working again.

am i missing something?

windows 98
2 mecs (1 w/adat 1 w/8i)
3 eds

thanks for any help,
-matthew
