

---

Subject: Paris Monitor Volume

Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 16:00:57 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi Faithful Paris friends!

Hey...

Thanks so much for your time!

No matter what song I open the monitor volume is always set to 20.

Is there something on the cfg page I can change?

Paris still rocks!

Blessings!

Michael

---

Subject: Re: Paris Monitor Volume

Posted by [Wayne](#) on Fri, 04 May 2012 16:14:58 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

If you have multi c16's one of them might have the knob turned up. It's happened to me this way before. Wayne

---

Subject: Re: Paris Monitor Volume

Posted by [kerryg](#) on Fri, 04 May 2012 17:13:01 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Yep, particularly if one of the C16s has a twitchy volume pot.

---

Subject: Re: Paris Monitor Volume

Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 22:08:16 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sweet! I'll try it. Thanks!!

---