
Subject: Paris Monitor Volume
Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 16:00:57 GMT
[View Forum Message](#) <> [Reply to Message](#)

Hi Faithful Paris friends!
Hey...
Thanks so much for your time!
No matter what song I open the monitor volume is
always set to 20.
Is there something on the cfg page I can change?
Paris still rocks!
Blessings!
Michael

Subject: Re: Paris Monitor Volume
Posted by [Wayne](#) on Fri, 04 May 2012 16:14:58 GMT
[View Forum Message](#) <> [Reply to Message](#)

If you have multi c16's one of them might have the knob turned up. It's happened to me this way
before. Wayne

Subject: Re: Paris Monitor Volume
Posted by [kerryg](#) on Fri, 04 May 2012 17:13:01 GMT
[View Forum Message](#) <> [Reply to Message](#)

Yep, particularly if one of the C16s has a twitchy volume pot.

Subject: Re: Paris Monitor Volume
Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 22:08:16 GMT
[View Forum Message](#) <> [Reply to Message](#)

Sweet! I'll try it. Thanks!!
