

---

Subject: Paris Monitor Volume  
Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 16:00:57 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hi Faithful Paris friends!  
Hey...  
Thanks so much for your time!  
No matter what song I open the monitor volume is  
always set to 20.  
Is there something on the cfg page I can change?  
Paris still rocks!  
Blessings!  
Michael

---

Subject: Re: Paris Monitor Volume  
Posted by [Wayne](#) on Fri, 04 May 2012 16:14:58 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

If you have multi c16's one of them might have the knob turned up. It's happened to me this way  
before. Wayne

---

Subject: Re: Paris Monitor Volume  
Posted by [kerryg](#) on Fri, 04 May 2012 17:13:01 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Yep, particularly if one of the C16s has a twitchy volume pot.

---

Subject: Re: Paris Monitor Volume  
Posted by [MICHAEL B HODGE](#) on Fri, 04 May 2012 22:08:16 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Sweet! I'll try it. Thanks!!

---